




# Sure-Flo<sup>®</sup>

## Self-Cleaning Strainers

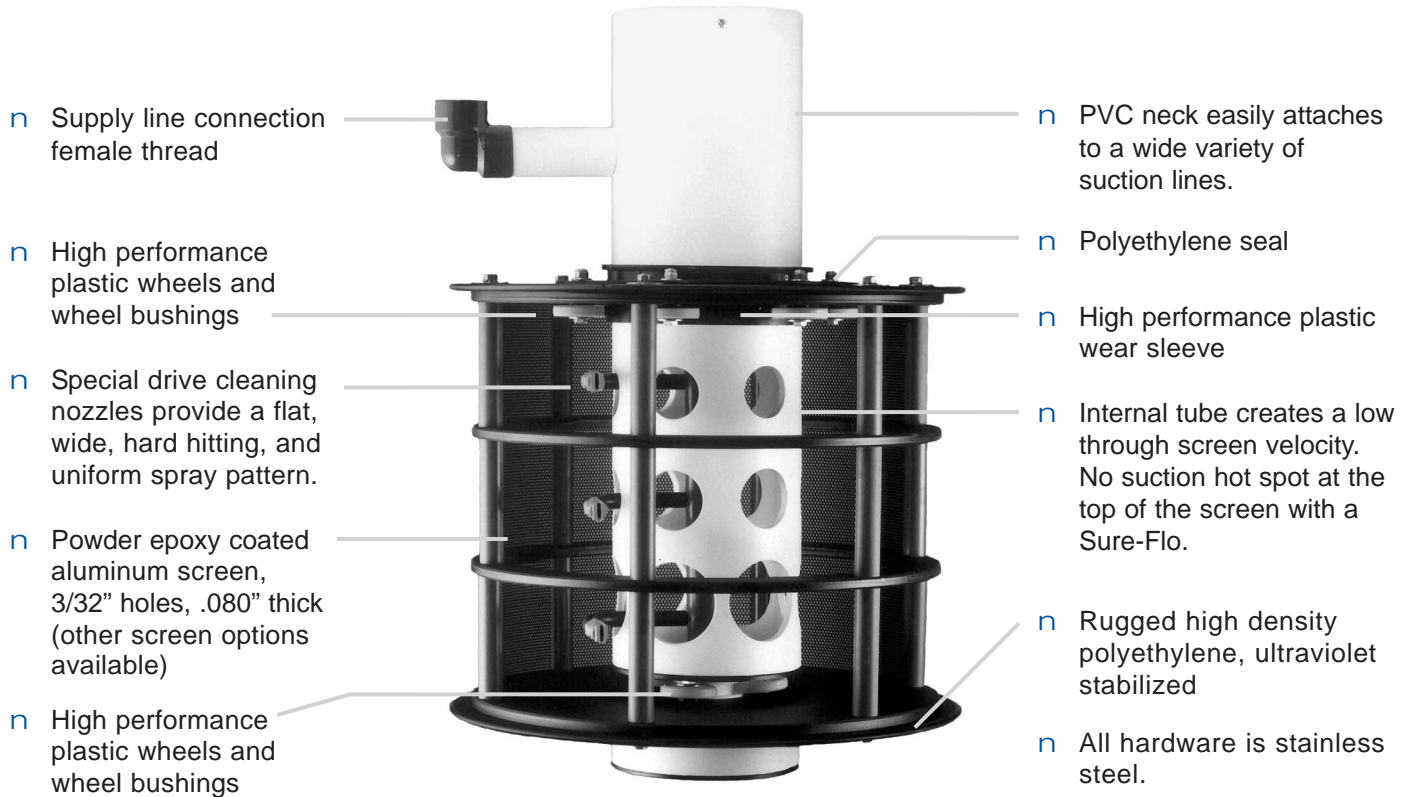

n Supply line connection female thread

n High performance plastic wheels and wheel bushings

n Special drive cleaning nozzles provide a flat, wide, hard hitting, and uniform spray pattern.

n Powder epoxy coated aluminum screen, 3/32" holes, .080" thick (other screen options available)

n High performance plastic wheels and wheel bushings

n PVC neck easily attaches to a wide variety of suction lines.

n Polyethylene seal

n High performance plastic wear sleeve

n Internal tube creates a low through screen velocity. No suction hot spot at the top of the screen with a Sure-Flo.

n Rugged high density polyethylene, ultraviolet stabilized

n All hardware is stainless steel.

Covered by one or more of the following U.S. Patent Nos. 4822486, 5108592, 5356532, 5520808, 5993652, 5215656, additional patent pending.

**Strainers operate in any position.**

### Superior Cleaning

Screens that revolve past stationary internal nozzles clean best. Debris blown off the screen is carried away in a strong current of water. This directional spray sends debris a great distance from the strainer.

### Built To Last

Properties of molded wear parts:

- | Good wear & abrasion resistance
- | Low coefficient of friction
- | High mechanical strength
- | UV light resistant
- | Very low moisture absorption

### Save Time & Money

No need to stop pumping to clean off a debris covered screen. A clean screen enables the pump to provide all the water and pressure it was designed to deliver.

**Quality and Service Since 1932**

Phone 734-761-5110

**SURE-FLO FITTINGS**  
 2077 S.State St. P.O. Box 1363  
 Ann Arbor, Mi. USA 48106  
[www.sure-flo.com](http://www.sure-flo.com)

Fax 734-761-8659